



## IMPORTANT NOTICE

**PROPER INSTALLATION & INFLATION PROCEDURES MUST BE FOLLOWED TO AVOID PERMANENT DAMAGE TO THE PART. WARRANTY WILL BE VOIDED IF THESE PROCEDURES HAVE NOT BEEN FOLLOWED.**




**AIR SPRINGS INFLATED WITHOUT FOLLOWING THE MANUFACTURER'S SPECIFICATIONS/NOT SUPPORTING THE VEHICLE WEIGHT CAN CAUSE THE FORCE TO DISTRIBUTE UNEVENLY, WHICH MAY LEAD TO PREMATURE PART FAILURE.**




### IMPROPER INSTALLATION EXAMPLES

Failure to mount the air spring correctly may cause the mounting clips to break, causing improper fitment resulting in leakage.

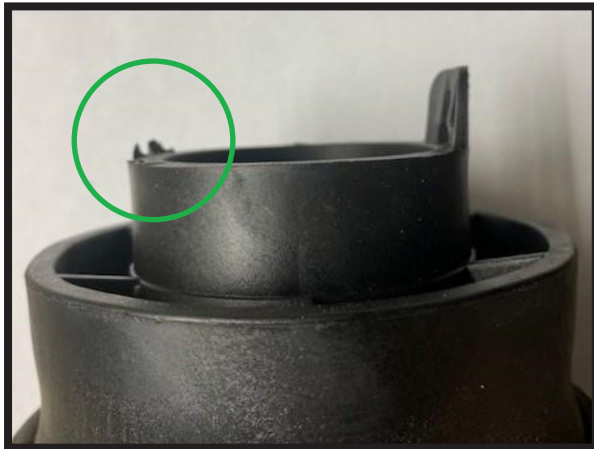

### IMPROPER INFLATION EXAMPLES

Air springs inflated without following the manufacturer's specifications/not supporting the vehicle can cause the force to distribute unevenly, which may result in crimp ring failure.

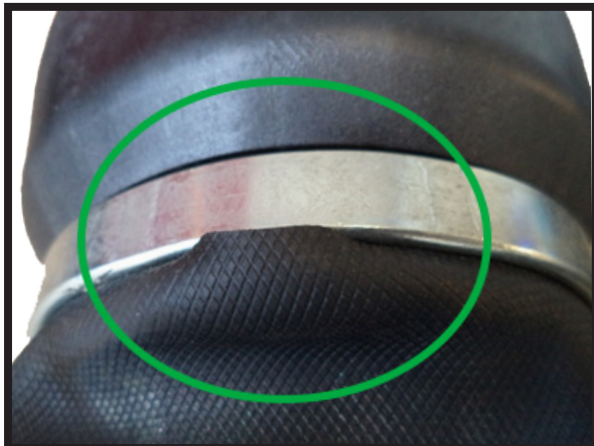

Arnett® is committed to the quality of its products. If you have a question or problem with any Arnett product, please contact Arnett by calling 800-251-8993 during normal business hours or email [techassistance@arnottinc.com](mailto:techassistance@arnottinc.com). (In the EU please call +31 (0)73 7850 580 or email [info@arnotteurope.com](mailto:info@arnotteurope.com))