




CLUTCHTECH



TSB-178


Bleeding procedure for slave cylinders with multi position fittings

Connect a bleeder line to the nipple and partially remove the hard line from the extension pipe to allow the fluid to flow out the bleeder port.

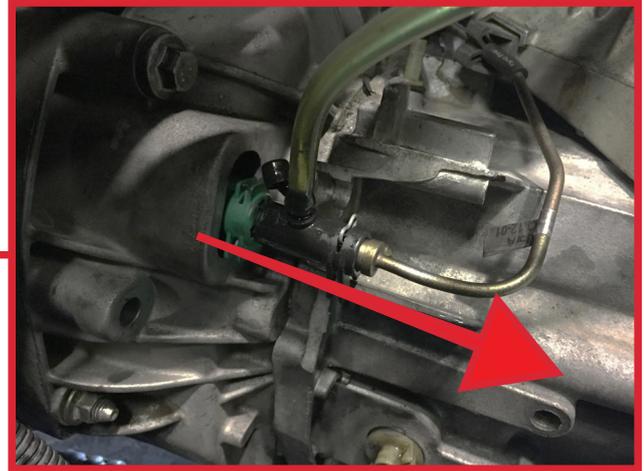

Fill the reservoir with fluid and allow the fluid to gravity bleed. Once fluid is flowing, use your hand to slowly depress the pedal by 3/4 stroke and back checking the reservoir level. Continue until no more air bubbles are flowing.

Once the air is out of the system. Push the hard line in fully to seal the bleeder port and check the clutch pedal has a normal operation.

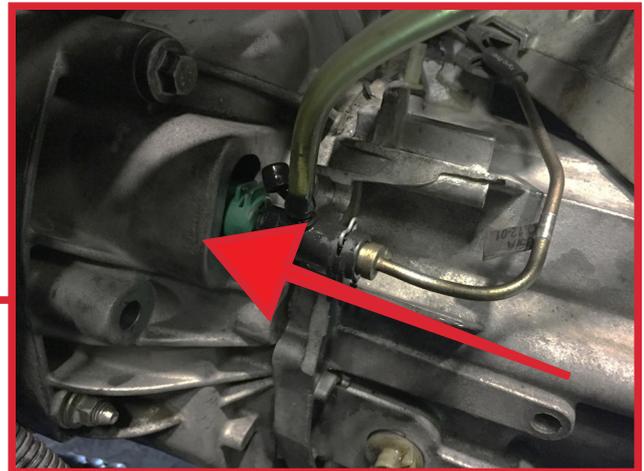

[youtube.com/watch?v=nXXXA6LOscU](https://www.youtube.com/watch?v=nXXXA6LOscU)



Scan with a QR app on your smart phone

LEADING BRANDS



For further support, please contact your distributor and/or visit our website.

AU site: australianclutch.com.au
US site: xclutchusa.com

