




Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724


Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724

Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724

Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme DIN/ISO 1724
prise 12-N

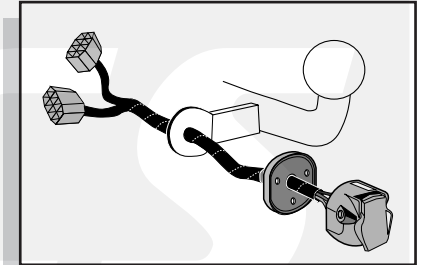

MERCEDES W202 / S202

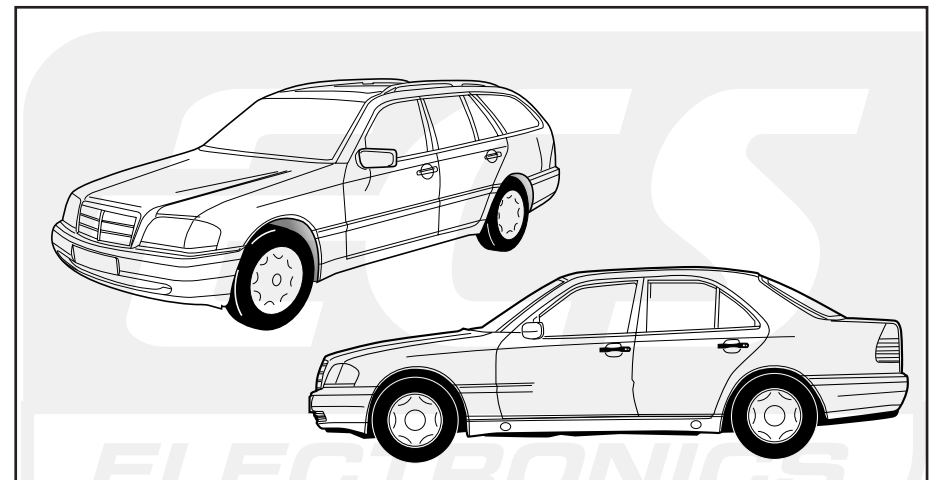



Bestel Nr.: MB-024-B





* Teilliste








* Liste de pieces






* Part list

* Onderdelenlijst

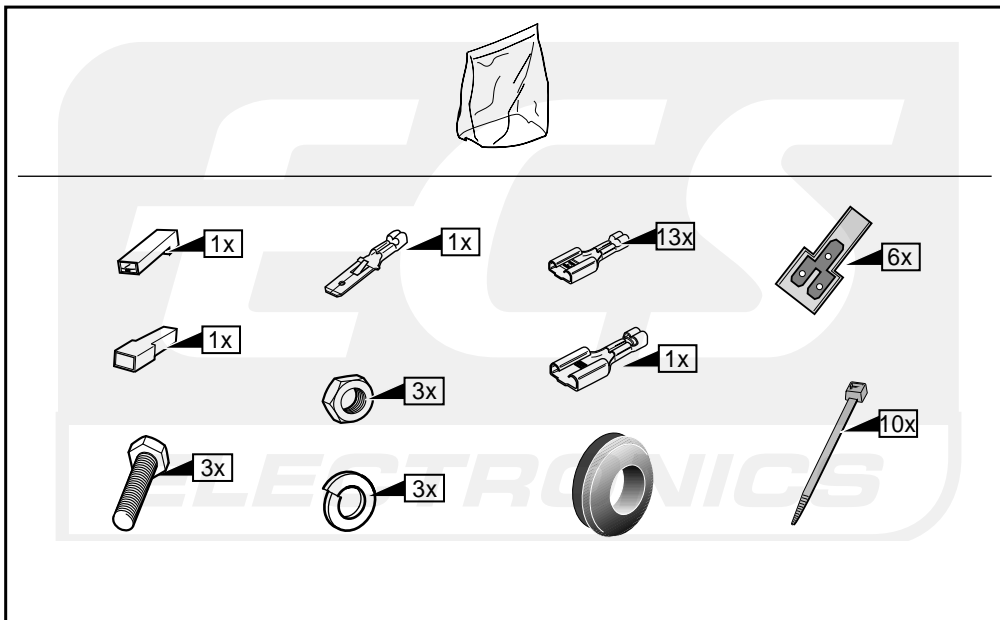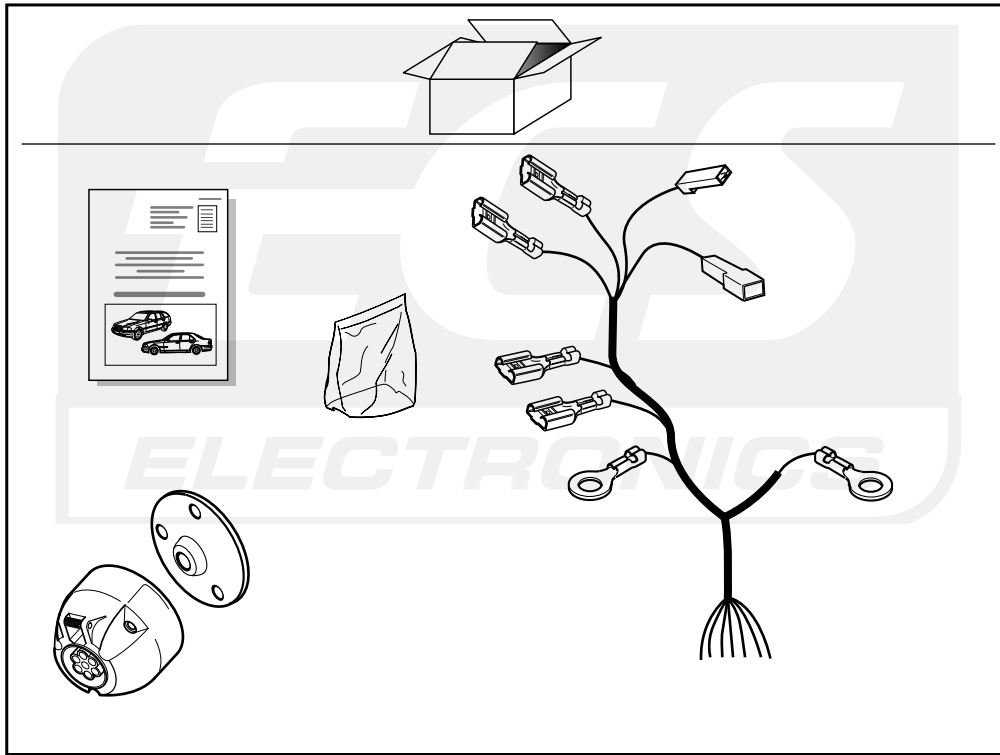

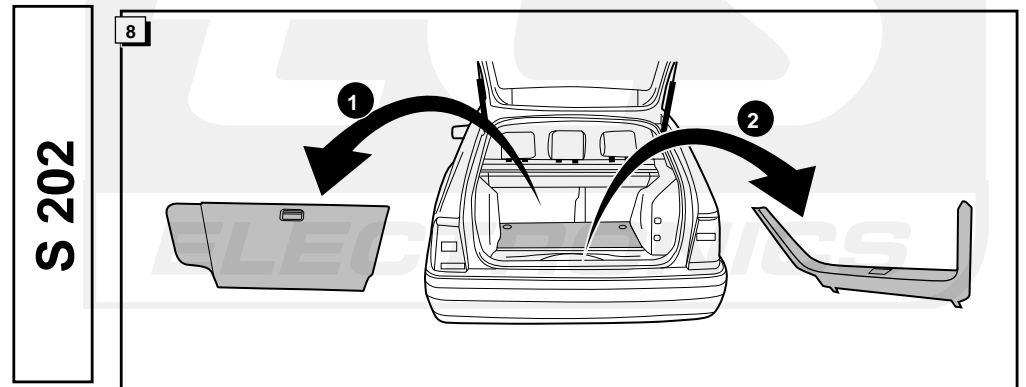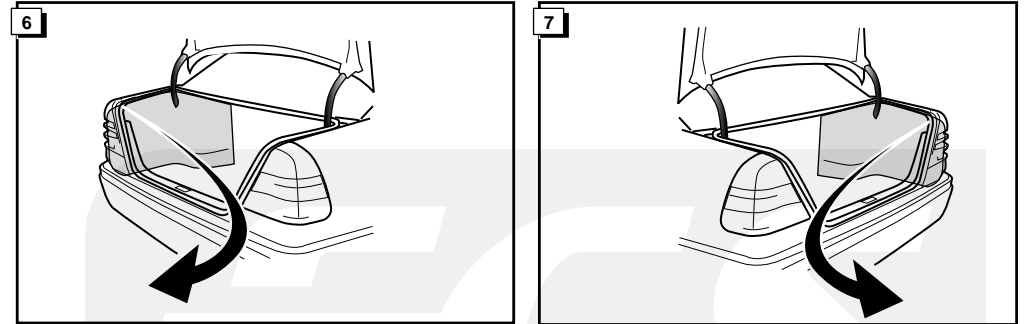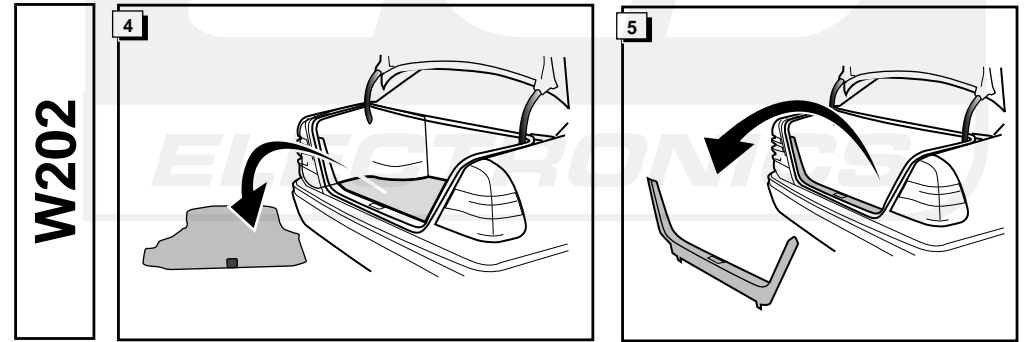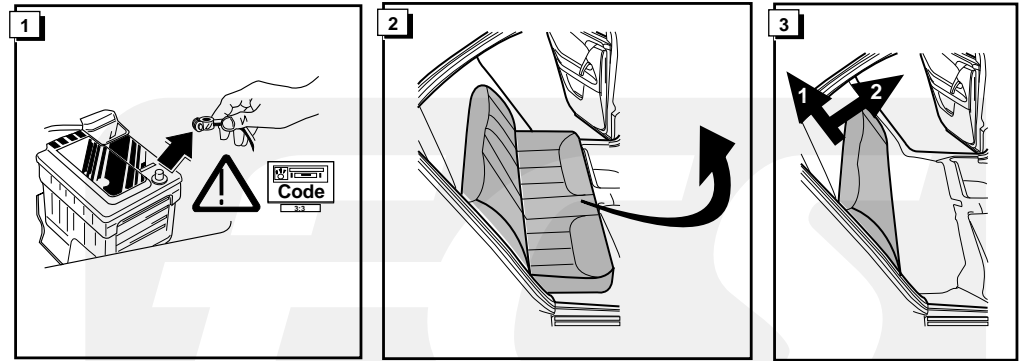

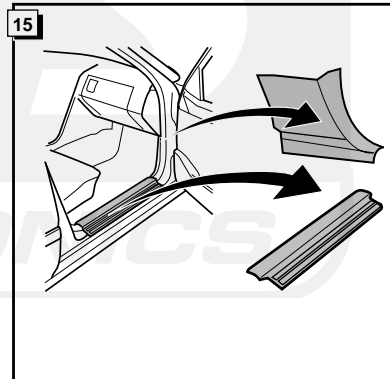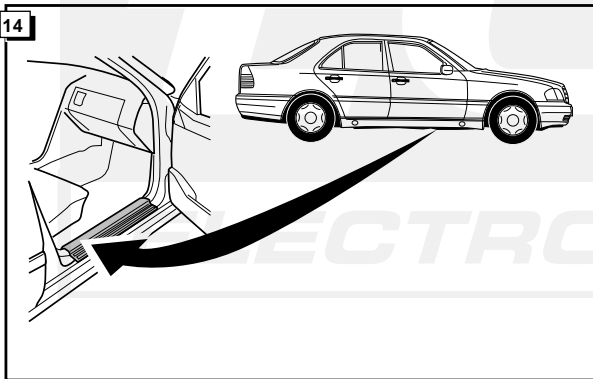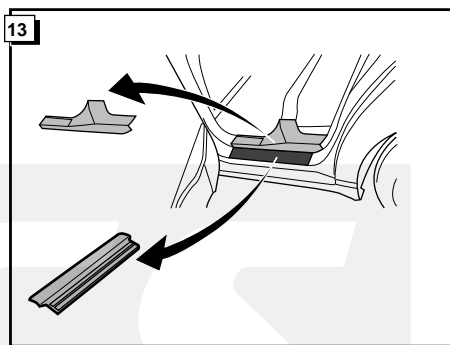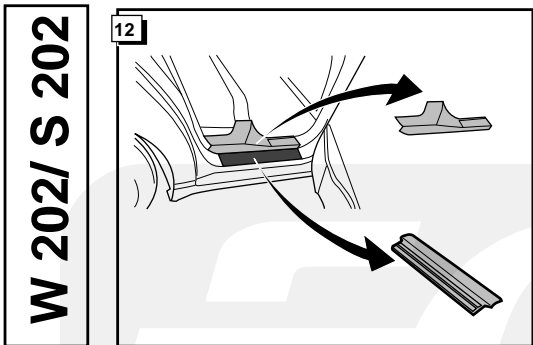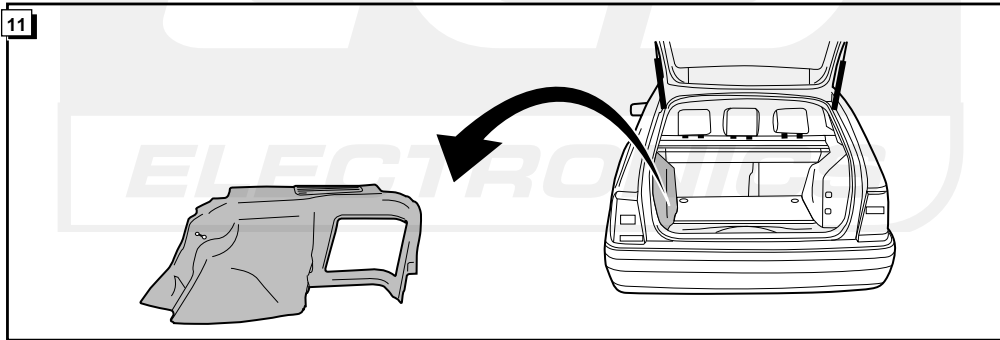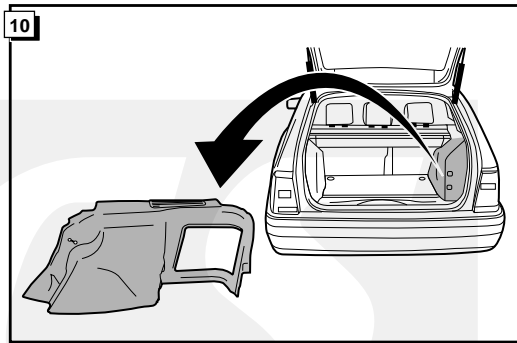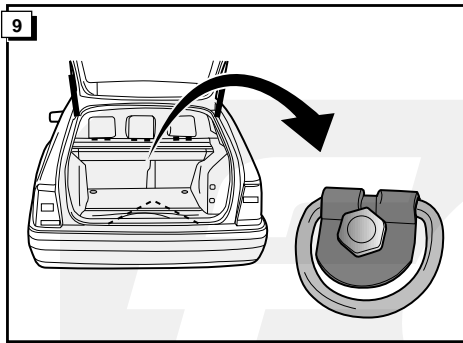

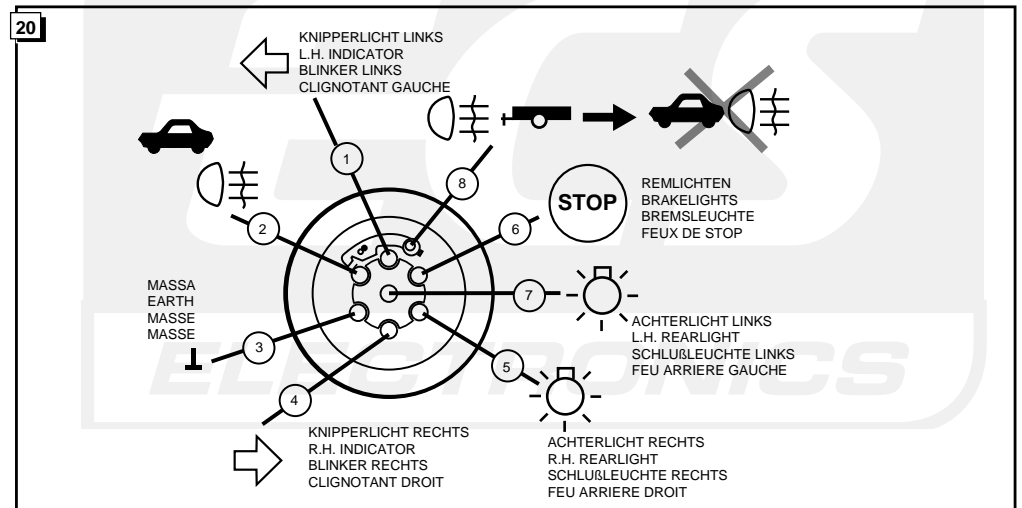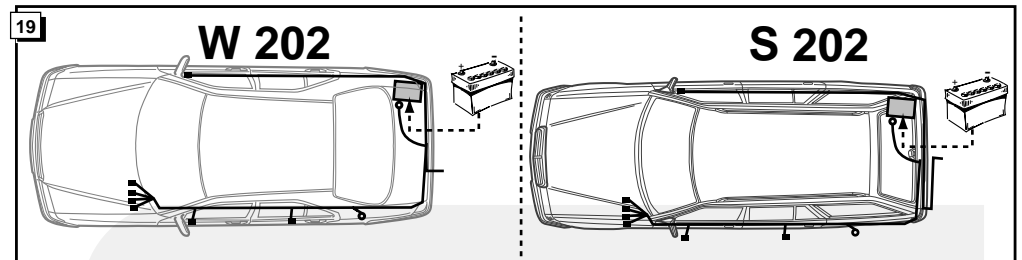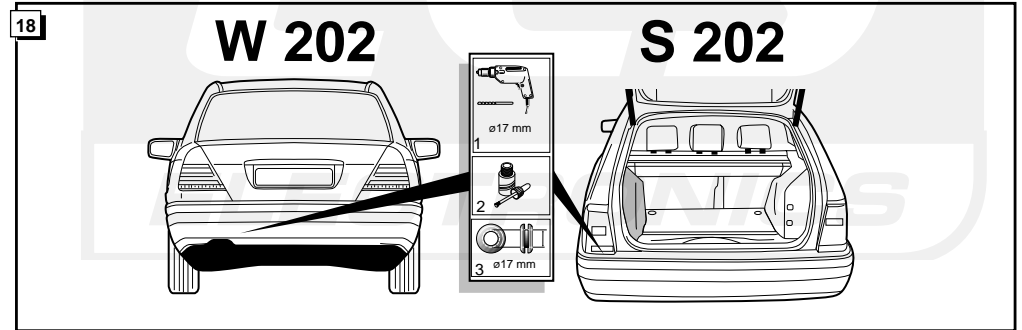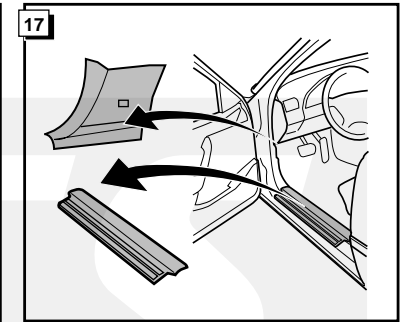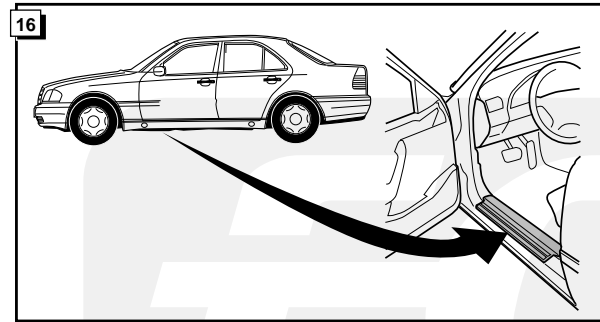

21


NL GB D FR

1 = L	GEEL	YELLOW	GELB	JAUNE
2 = 54-G	BLAUW	BLUE	BLAU	BLEU
3 = 31	WIT	WHITE	WEIß	BLANC
4 = R	GROEN	GREEN	GRÜN	VERT
5 = 58-R	BRUIN	BROWN	BRAUN	MARRON
6 = 54	ROOD	RED	ROT	ROUGE
7 = 58-L	ZWART	BLACK	SCHWARZ	NOIR
8 = 58-B	GRIJS	GREY	GRAU	GRIS

57


! **CONTROLEER FUNCTIES !**
CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
CONTRÔLER LES FONCTIONS !

22

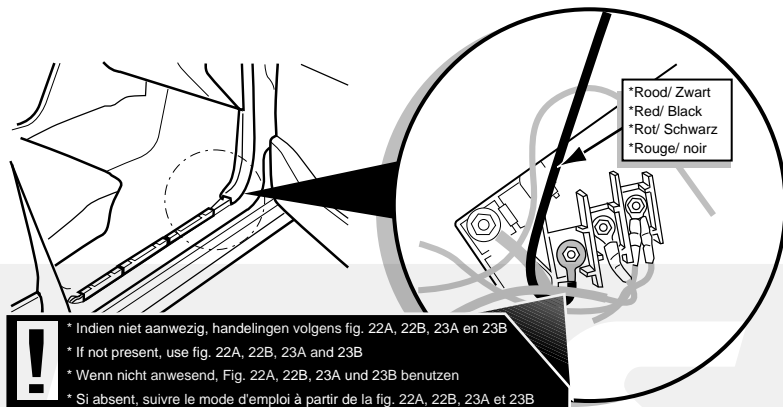

! * Indien niet aanwezig, handelingen volgens fig. 22A, 22B, 23A en 23B
 * If not present, use fig. 22A, 22B, 23A and 23B
 * Wenn nicht anwesend, Fig. 22A, 22B, 23A und 23B benutzen
 * Si absent, suivre le mode d'emploi à partir de la fig. 22A, 22B, 23A et 23B



22A
















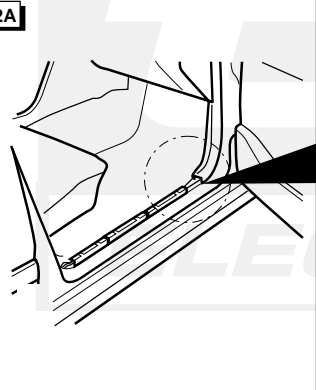









*Rood/ Zwart
 *Red/ Black
 *Rot/ Schwarz
 *Rouge/ noir







22B

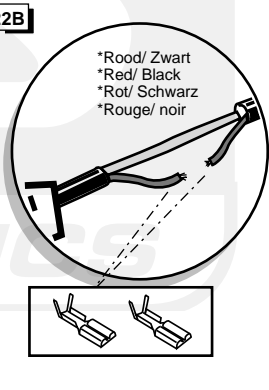

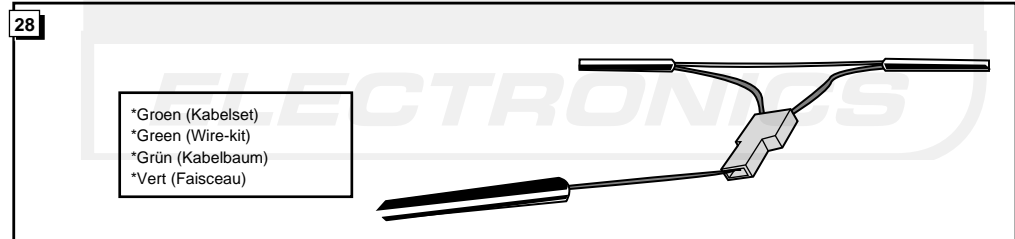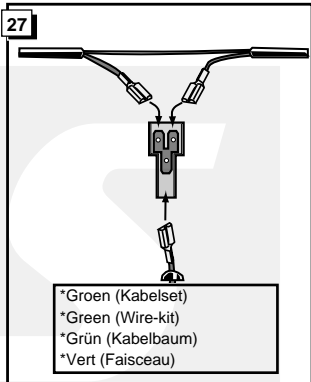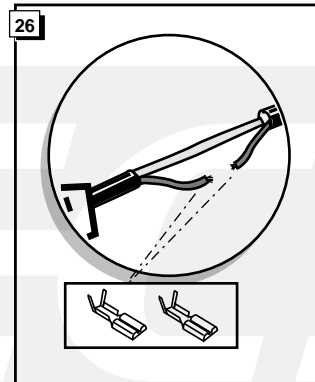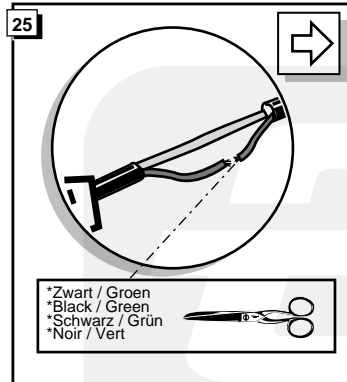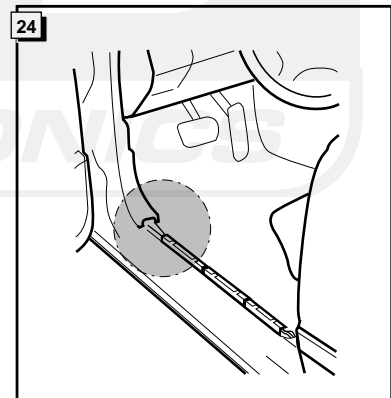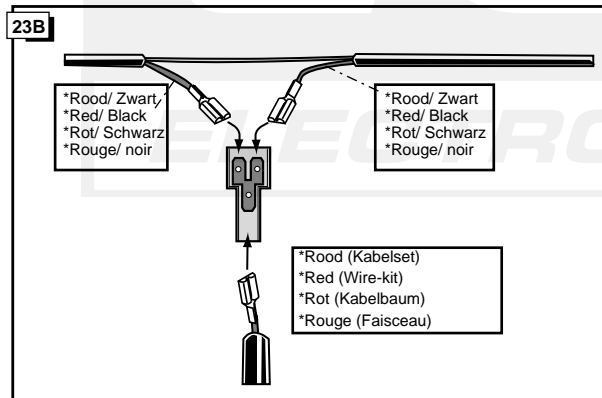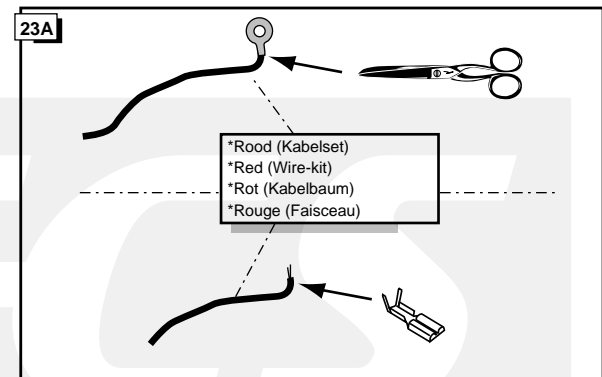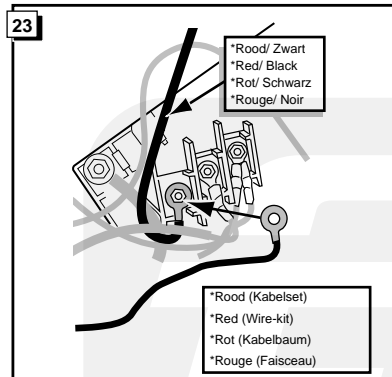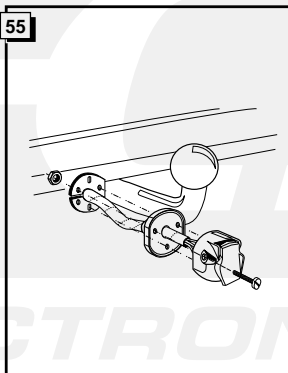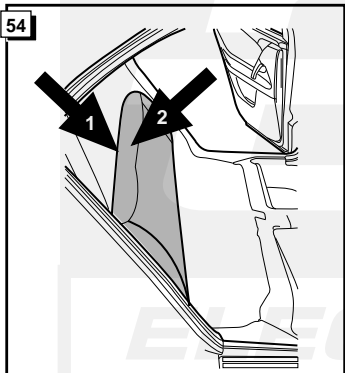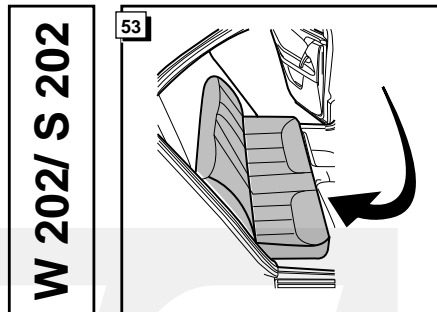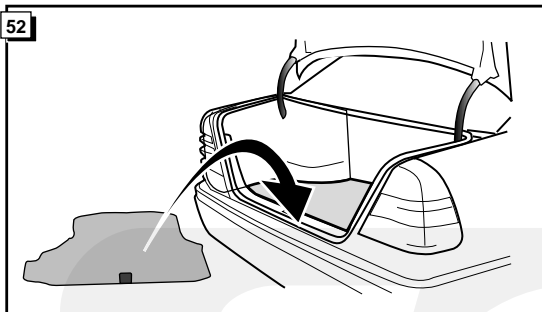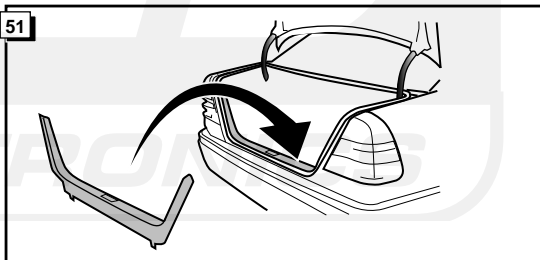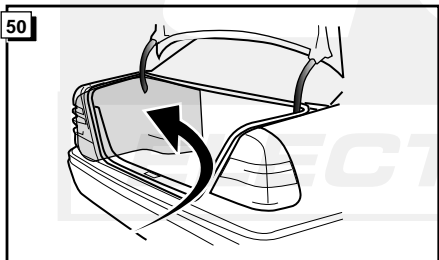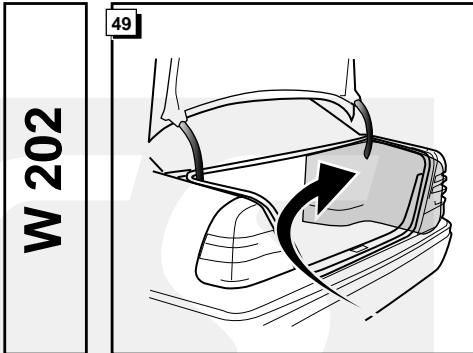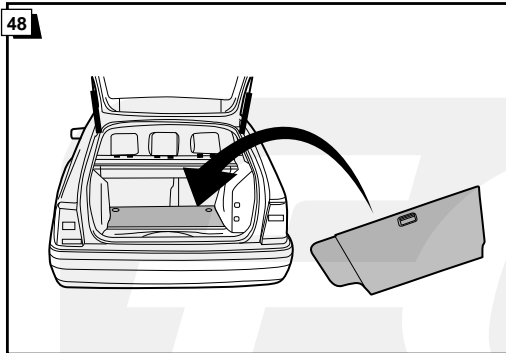

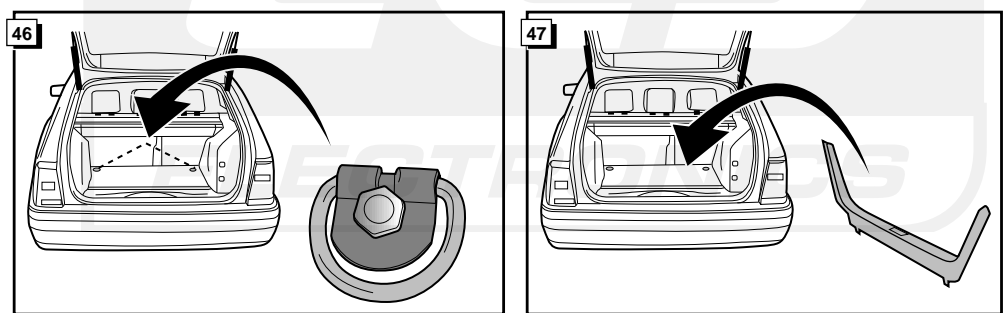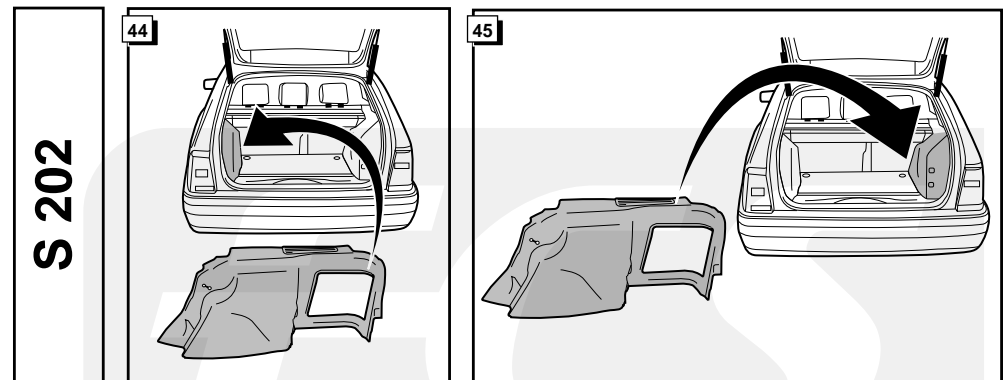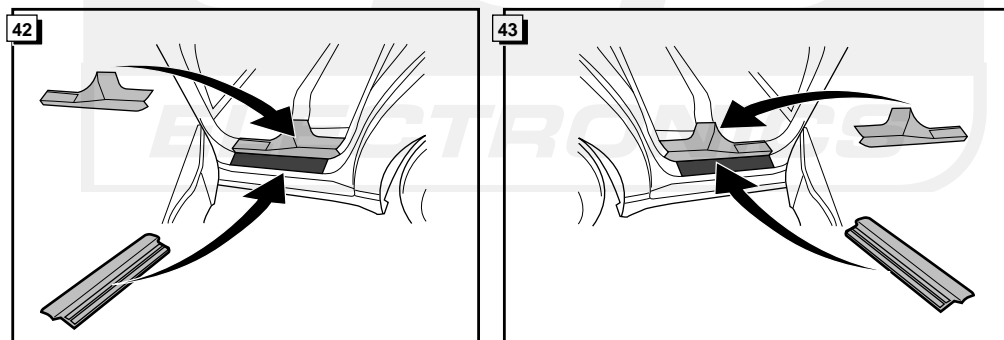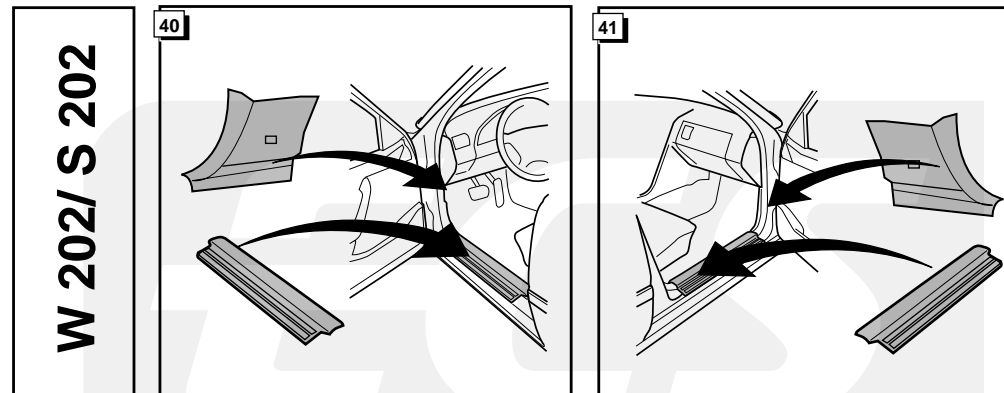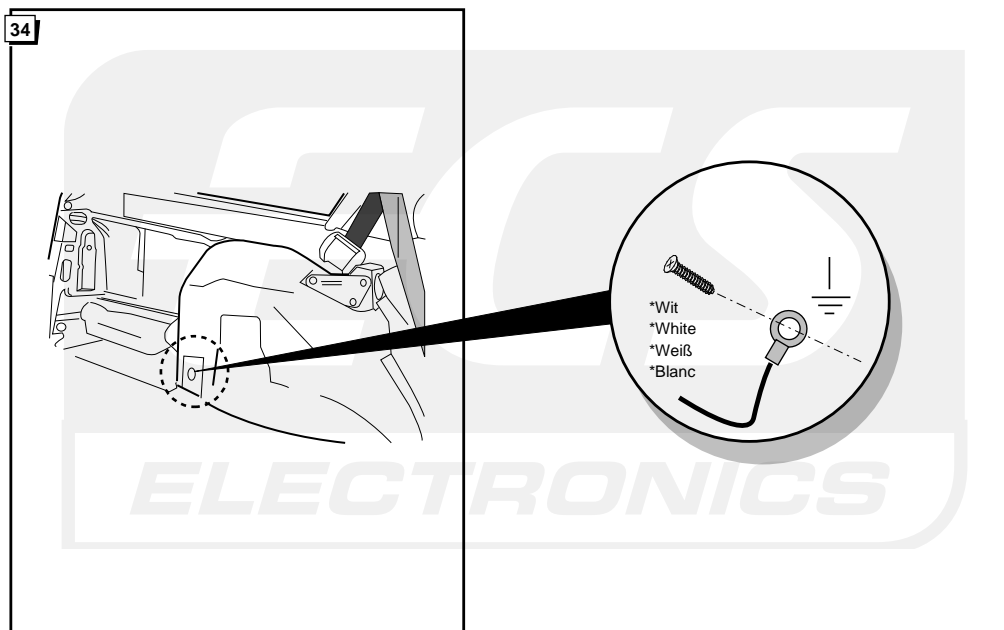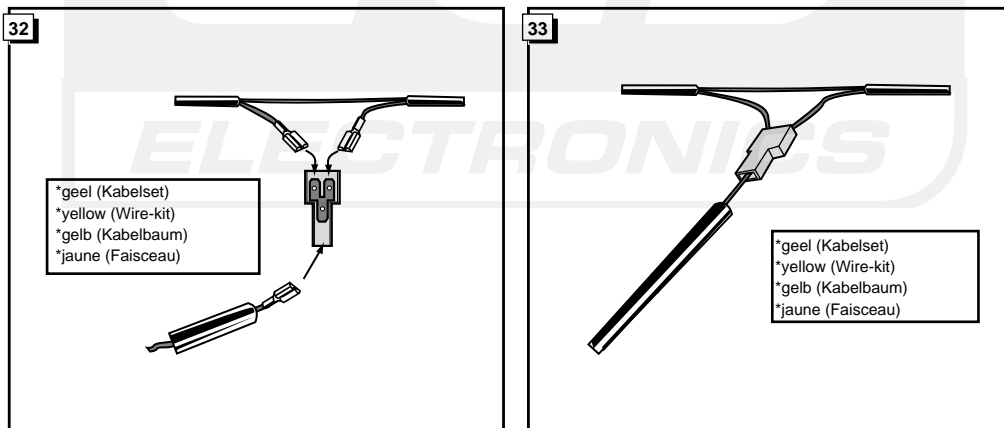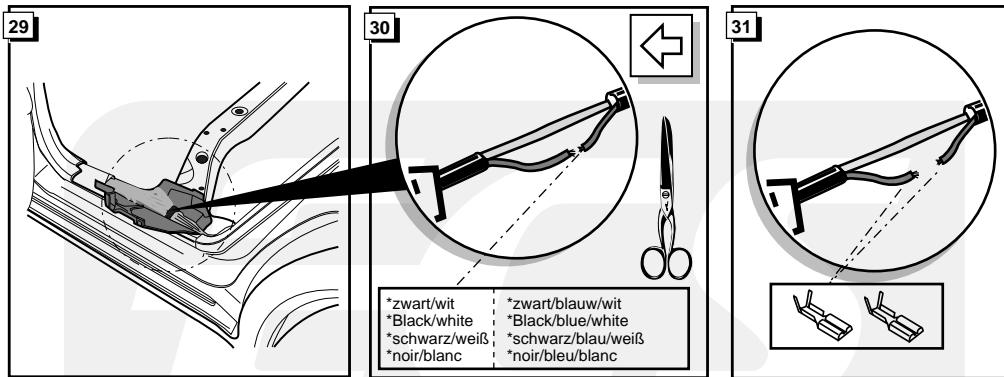

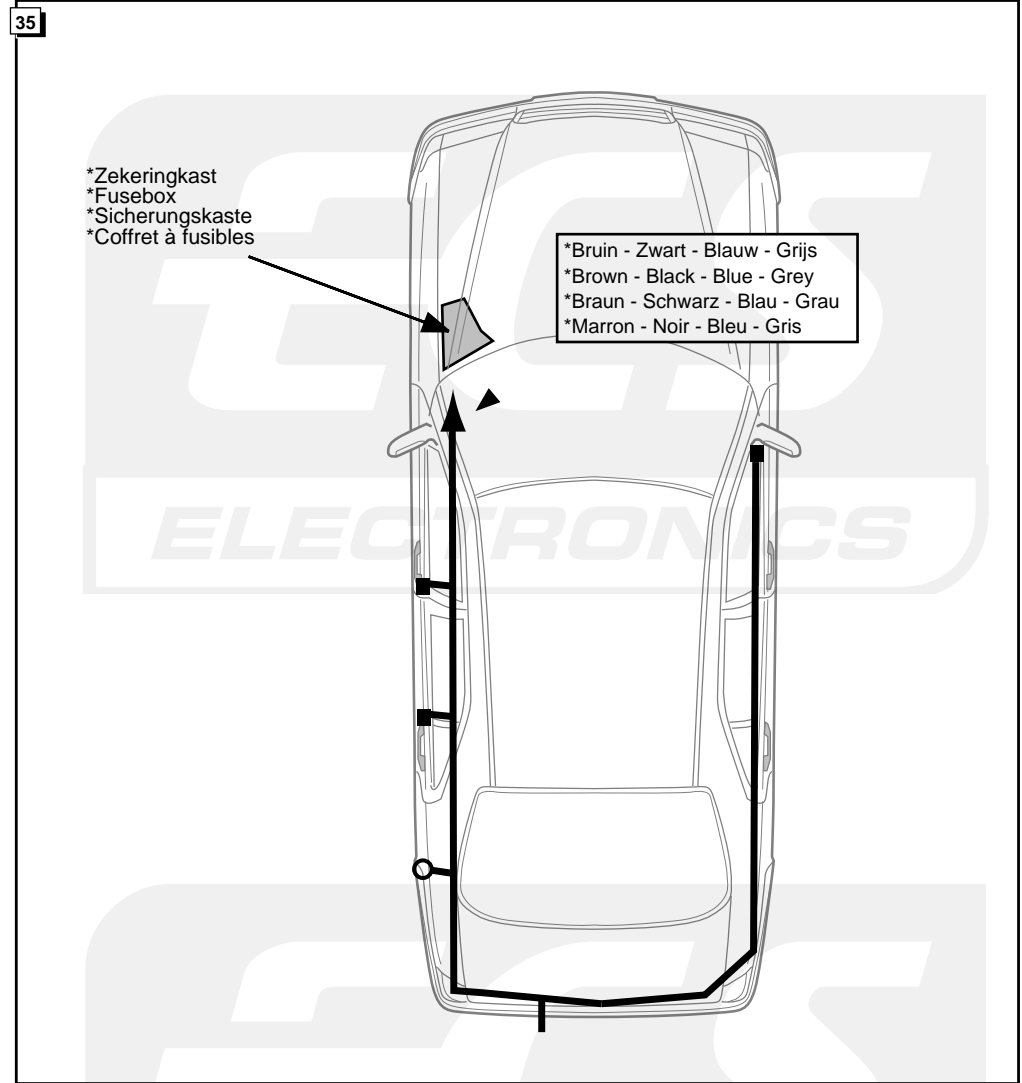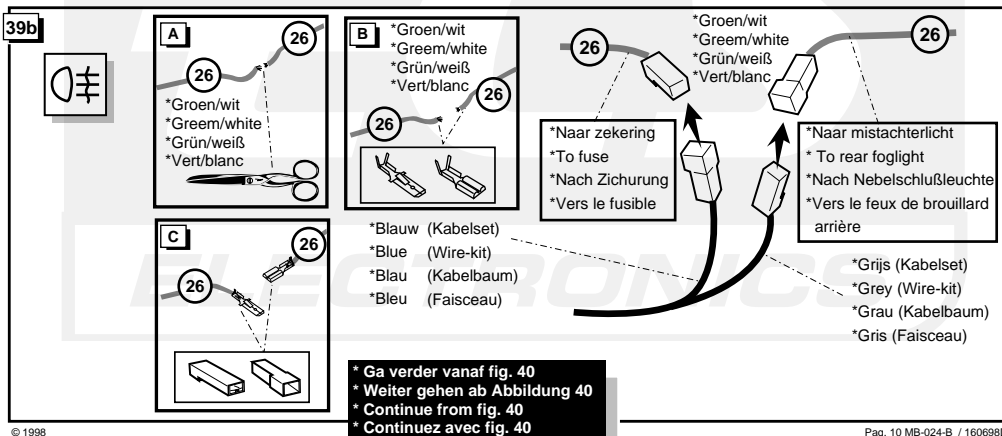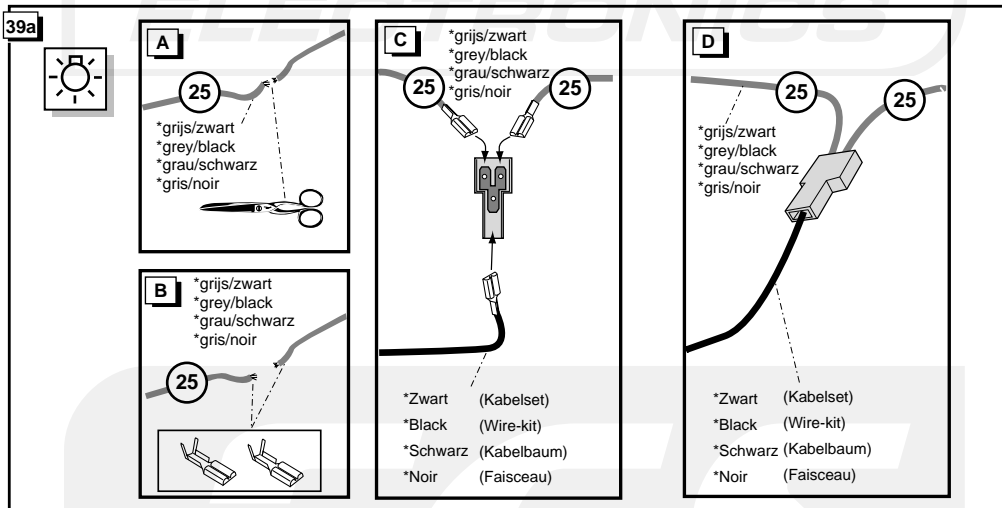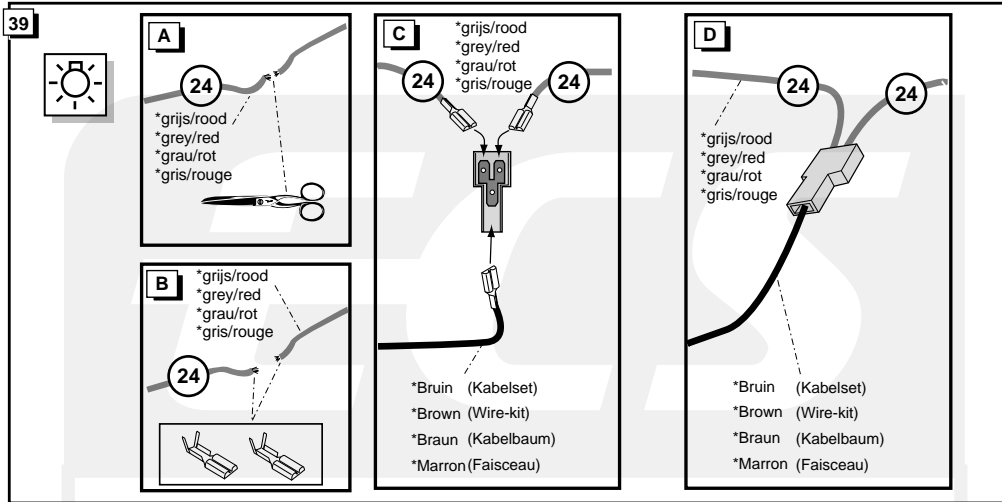

36	Kabelset-Wiring-harness-Kabelbaum-Faisceau		Zekering-Fuse-Sicherung-Fusible
Voor/before/vor/avant 12/94	Blauw-blue-blaue-bleu		grijs/groen-grey/green-grau/grün-gris/vert (28)
Zie-See-Sehen-Voir 37	Grijs-grey-grau-gris Zwart-black-schwarz-noir Bruin-brown-braun-marron		grijs/groen-grey/green-grau/grün-gris/vert (28) grijs/zwart-grey/black-grau/schwarz-gris/noir (18) grijs/rood-grey/red-grau/rot-gris/rouge (24)
12/94 - 5/97	Blauw-blue-blaue-bleu		groen/wit-green/white-grün/weiß-vert/blanc (17)
Zie-See-Sehen-Voir 38	Grijs-grey-grau-gris Zwart-black-schwarz-noir Bruin-brown-braun-marron		groen/wit-green/white-grün/weiß-vert/blanc (17) grijs/zwart-grey/black-grau/schwarz-gris/noir (16) grijs/rood-grey/red-grau/rot-gris/rouge (15)
Na/after/nach/après 5/97	Blauw-blue-blaue-bleu		groen/wit-green/white-grün/weiß-vert/blanc (26)
Zie-See-Sehen-Voir 39	Grijs-grey-grau-gris Zwart-black-schwarz-noir Bruin-brown-braun-marron		groen/wit-green/white-grün/weiß-vert/blanc (26) grijs/zwart-grey/black-grau/schwarz-gris/noir (25) grijs/rood-grey/red-grau/rot-gris/rouge (24)

