


Montage-handleiding elektrokabelset voor
trekhaak met 13-P contactdoos
vlgs. DIN/ISO norm 11446


Fitting instructions electric wiringkit
towbar with 13-P socket up to
DIN/ISO norm 11446

Einbauanleitung Elektrosatz
Anhängervorrichtung mit 13-P Steckdose
lt. DIN/ISO Norm 11446


Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme DIN/ISO 11446
prise 13-P

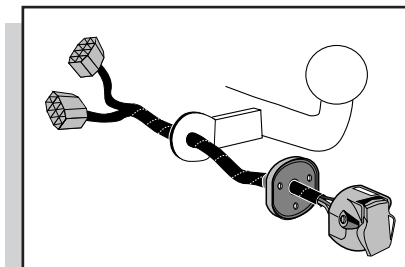

MERCEDES S202 Combi Met FBS-3 06/1997-

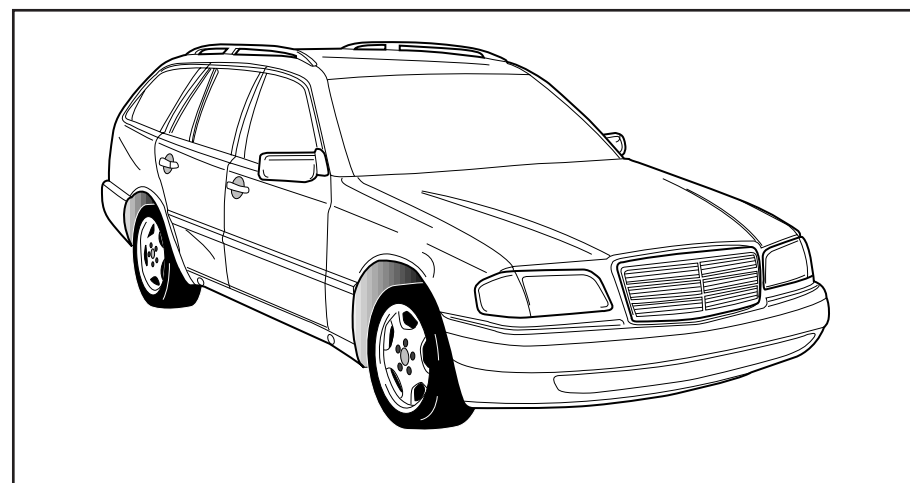

Bestel Nr.: MB-002-HL

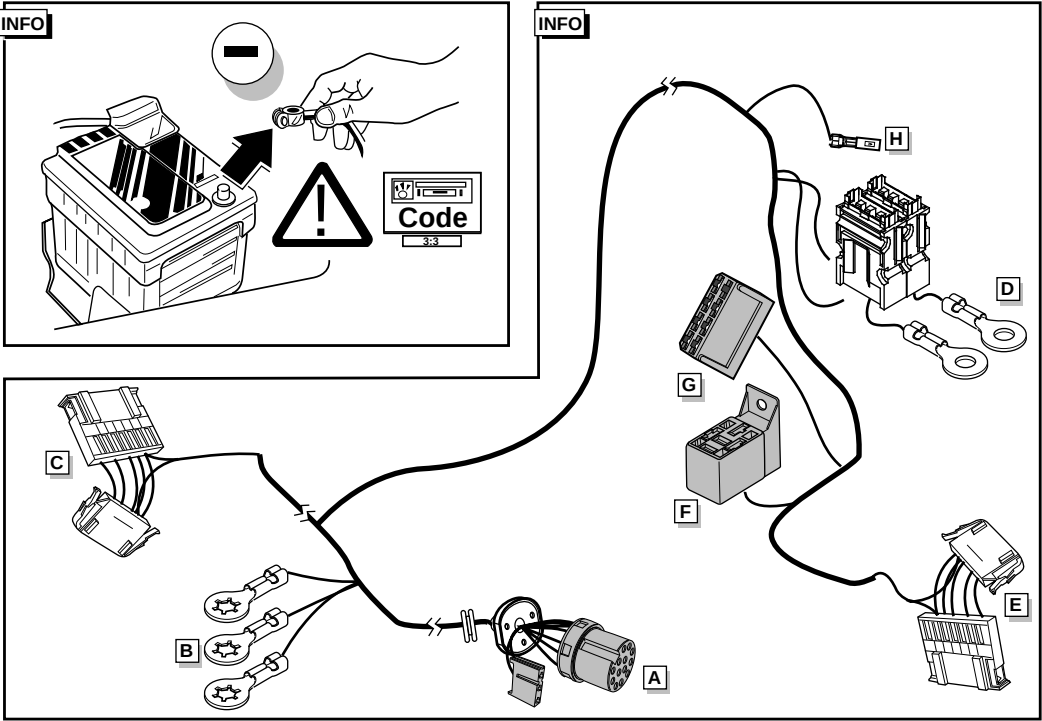


INFO


Socket connection.
Contactdoos aansluiting.
Anschluß Steckdose
Connection de la prise





	NL	GB	D	F
1/L	GEEL	YELLOW	GELB	JAUNE
2	BLAUW	BLUE	BLAU	BLEU
2a	GRIJS	GREY	GRAU	GRIS
3/31	WIT	WHITE	WEIß	BLANC
4/R	GROEN	GREEN	GRÜN	VERT
5/58-R	BRUIN	BROWN	BRAUN	MARRON
6/54	ROOD	RED	ROT	ROUGE
7/58-L	ZWART	BLACK	SCHWARZ	NOIR
8	ZW/RD	BL/RD	SCHW/RT	NO/RO
9	BR/WI	BR/WHI	BR/WE	MAR/BLA
13	WIT	WHITE	WEIß	BLANC

ROUTING


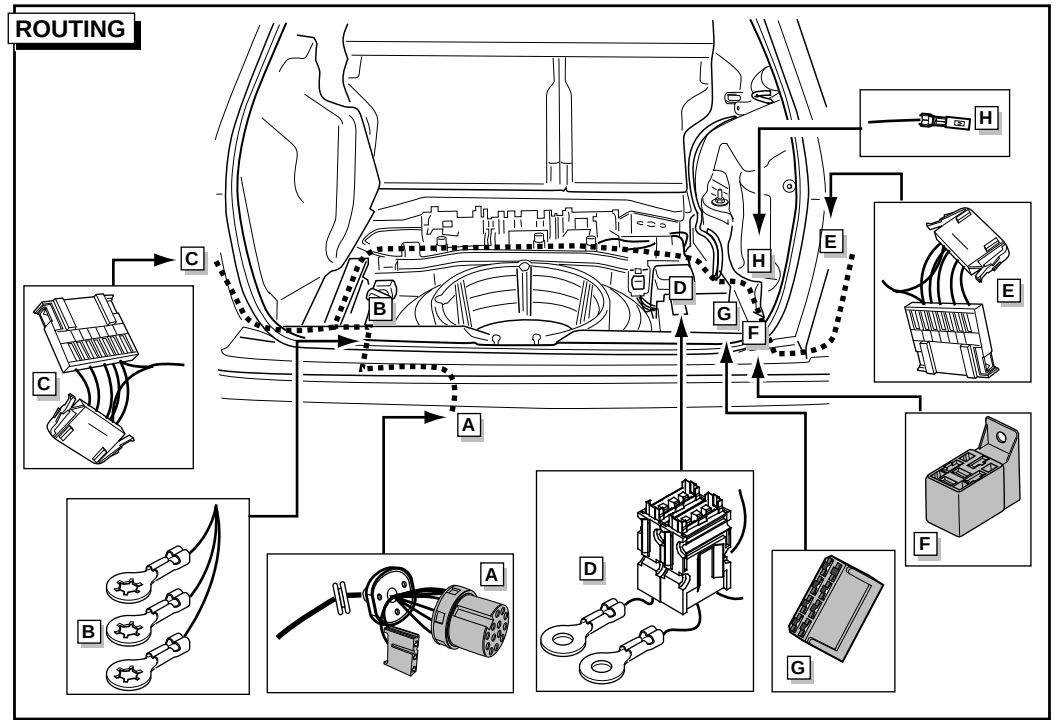


1

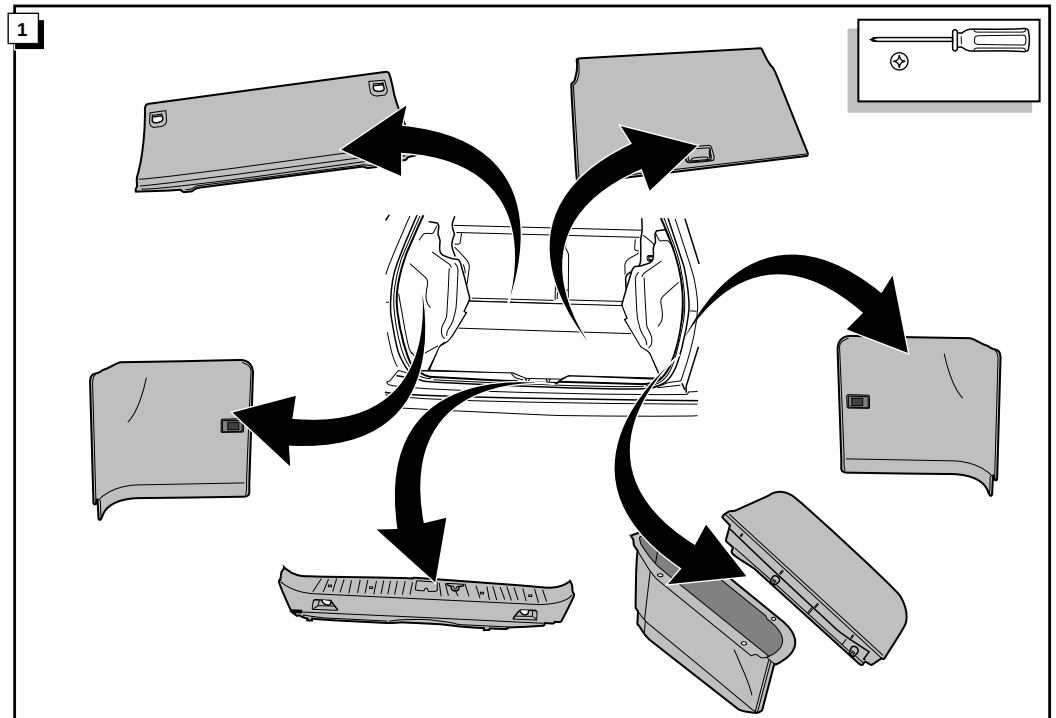


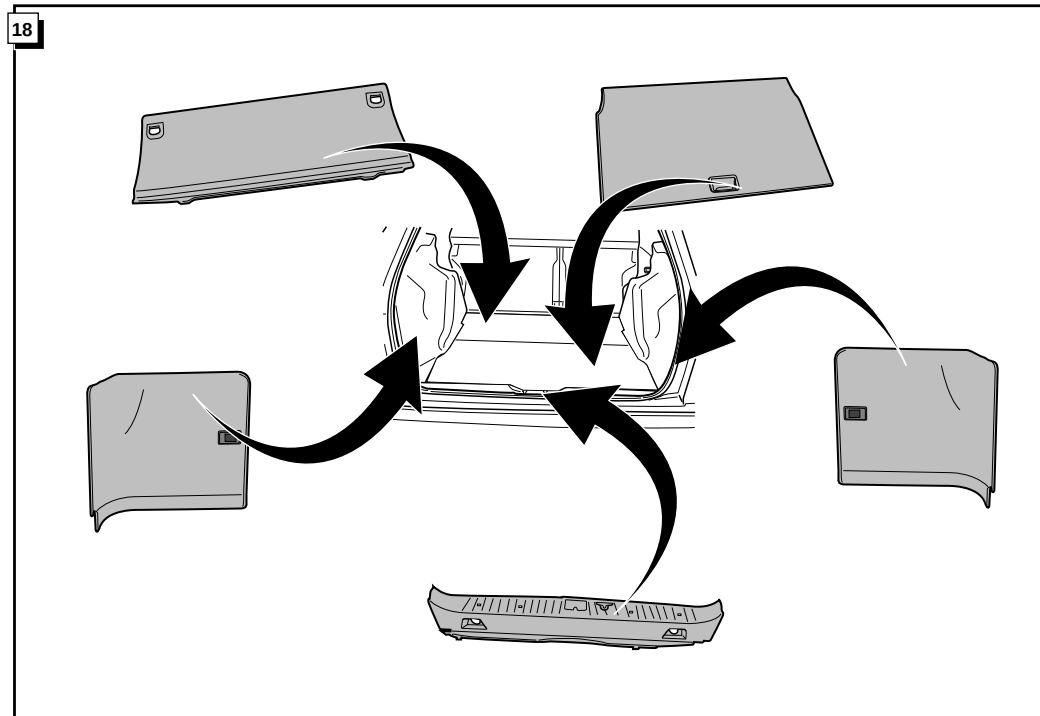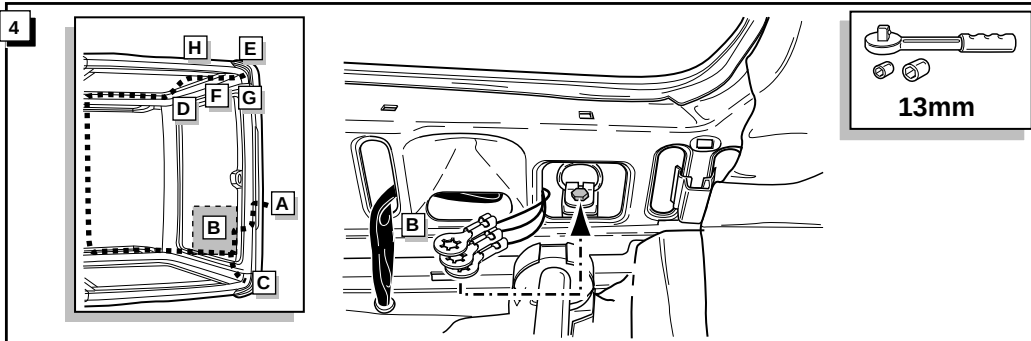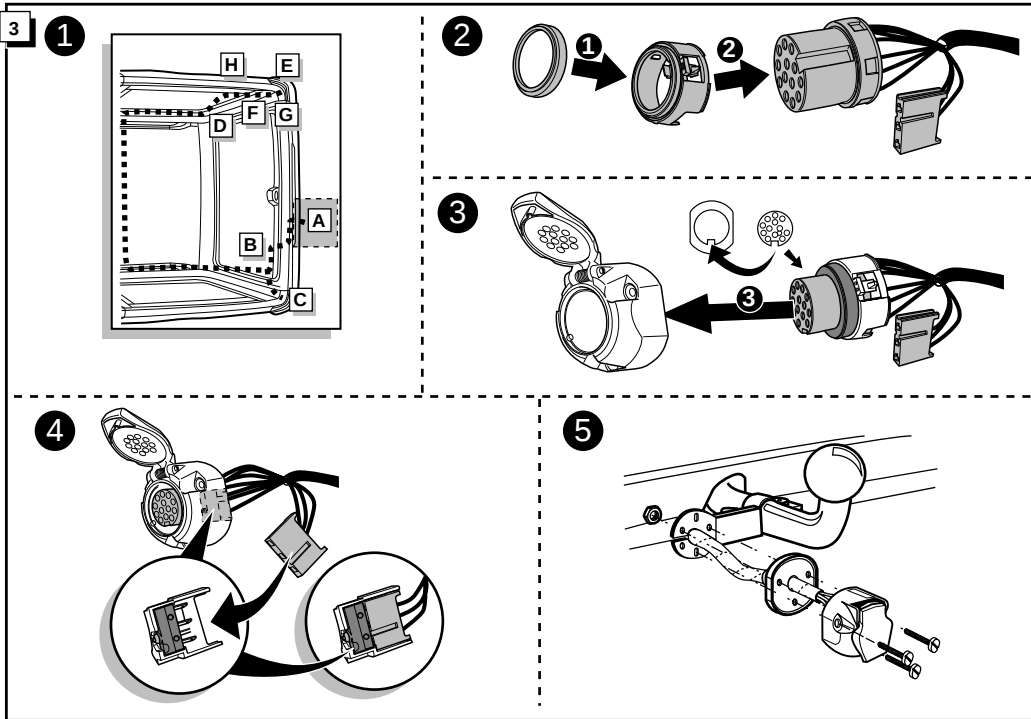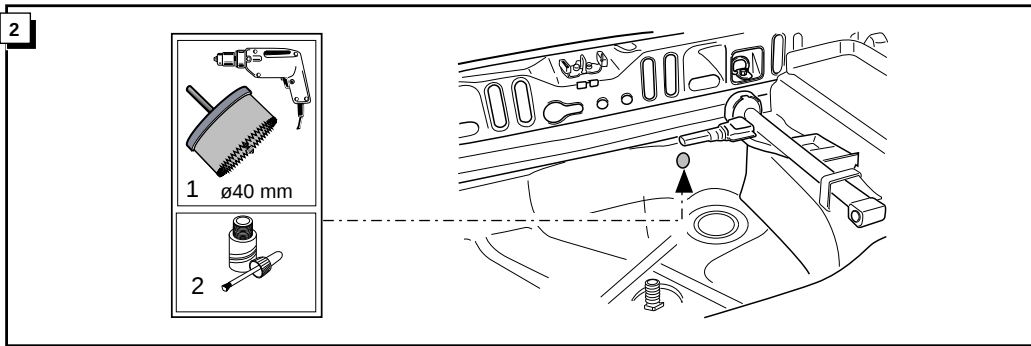

14

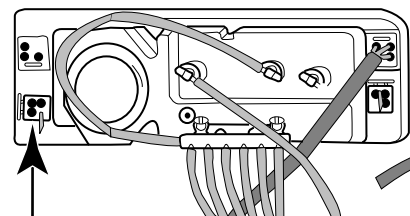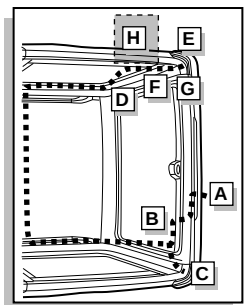


Brown/ White.
Bruin/wit
Braun/weiß
Marron/blanc

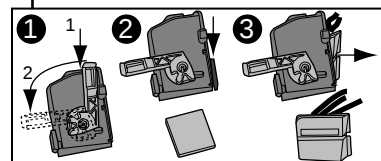

*POS.15

Witte connector pos. 15
White connector pos. 15
Weiße Steckverbinder pos. 15
Le connecteur blanc pos. 15


15

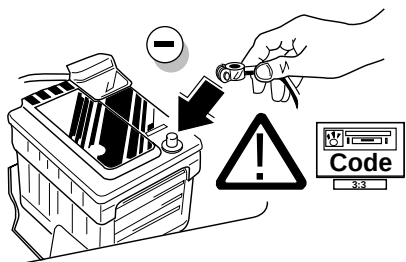



16

CONTROLEER FUNKTIES !
CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
CONTRÔLER LES FONCTIONS !


17

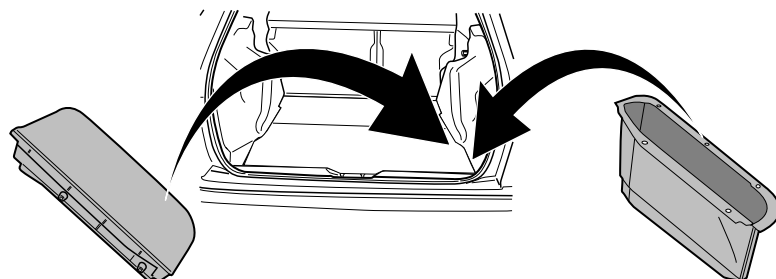


5

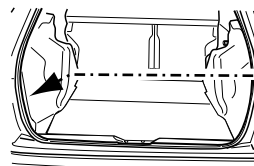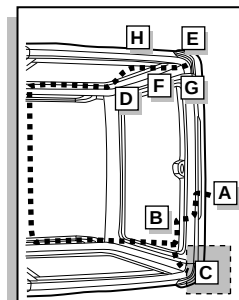



1

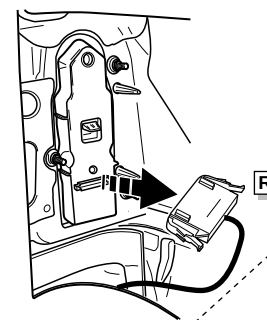

2

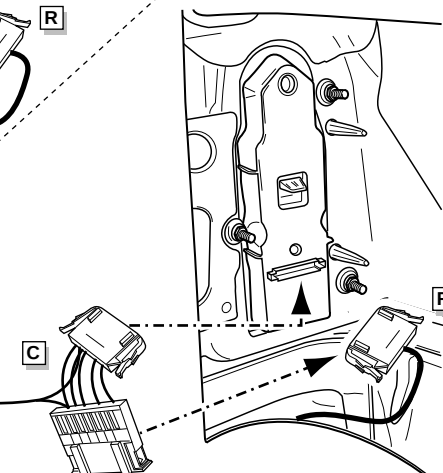

6

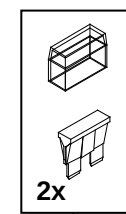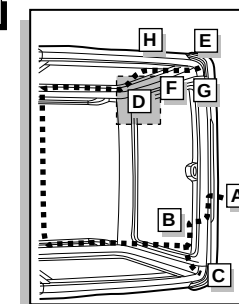

2x

