




Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724


Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N

Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlgs. DIN/ISO norm 1724


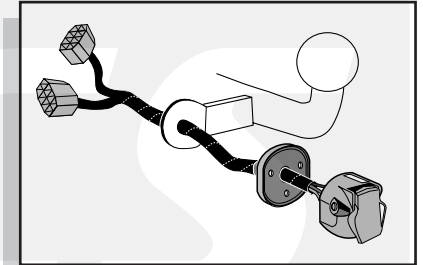







VW SHARAN	1999-2000	+2000-
SEAT ALHAMBRA	1999-2000	+2000-
FORD GALAXY	1999-2000	+2000-

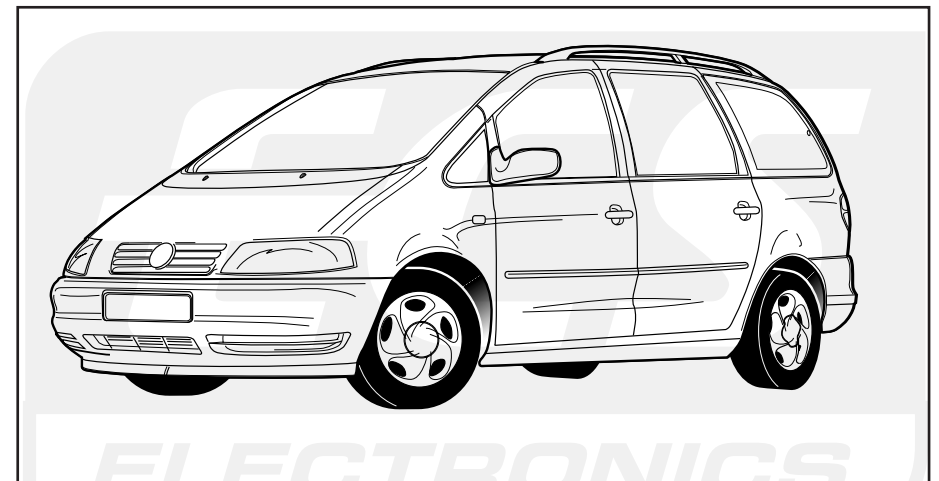


Bestel Nr.: VW-011-BB

\* Teilliste      \* Liste de pieces      \* Part list      \* Onderdelenlijst

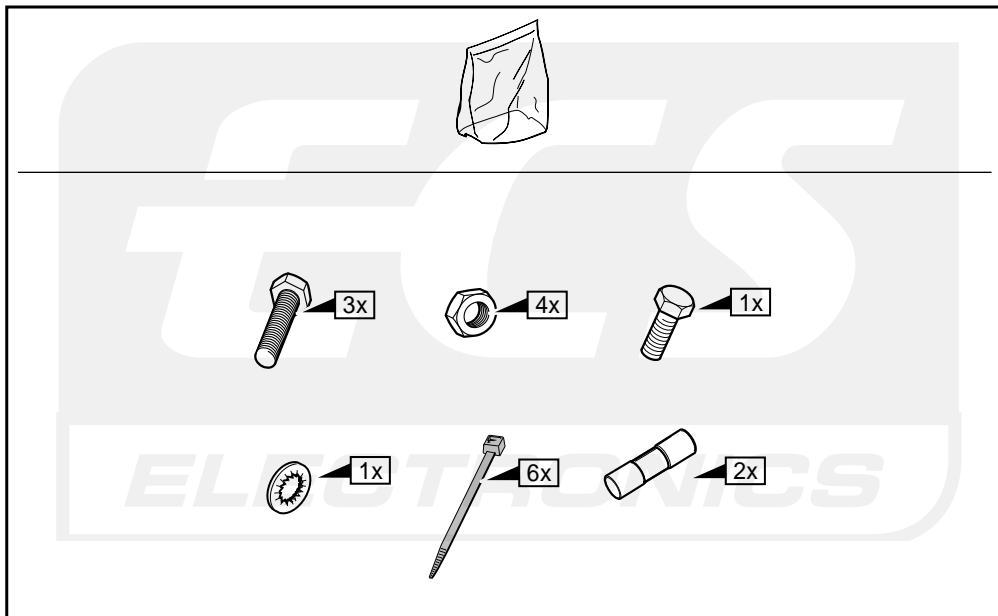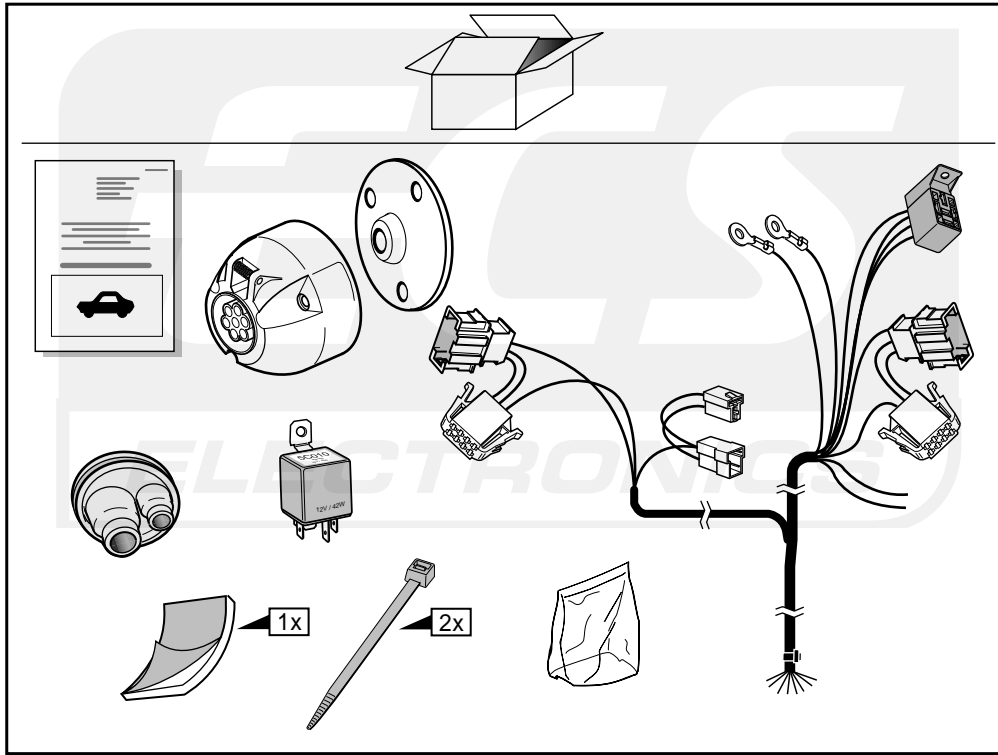


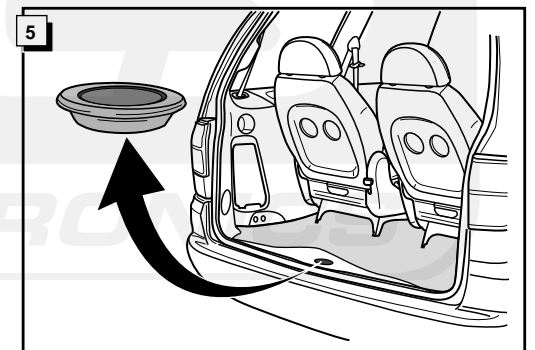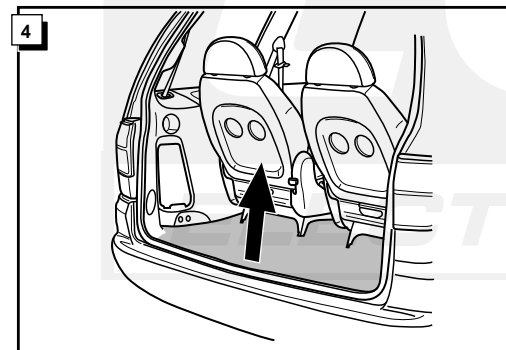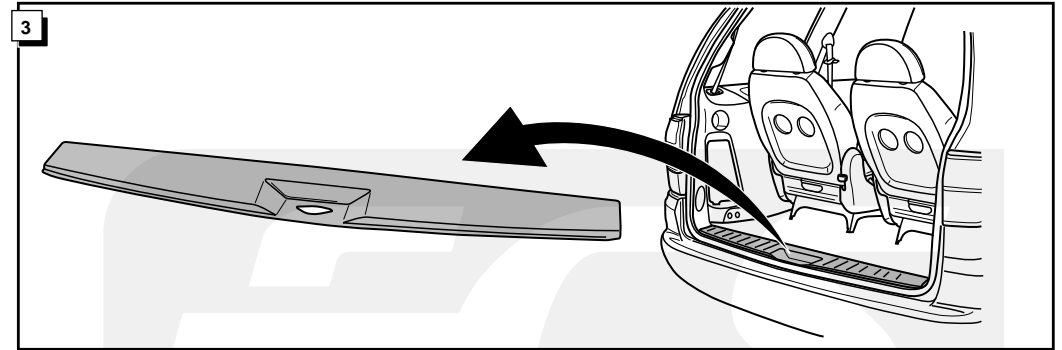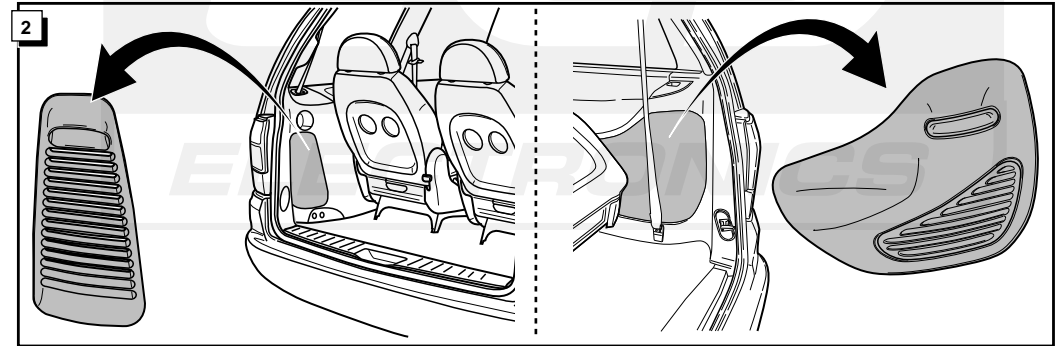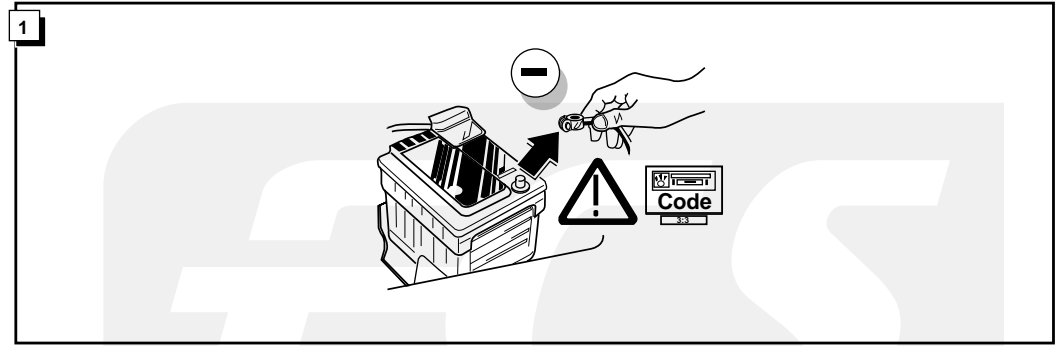


**INFO**

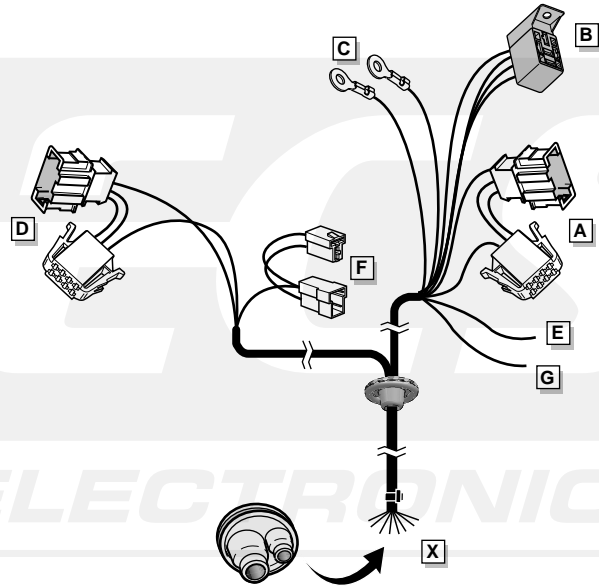


18

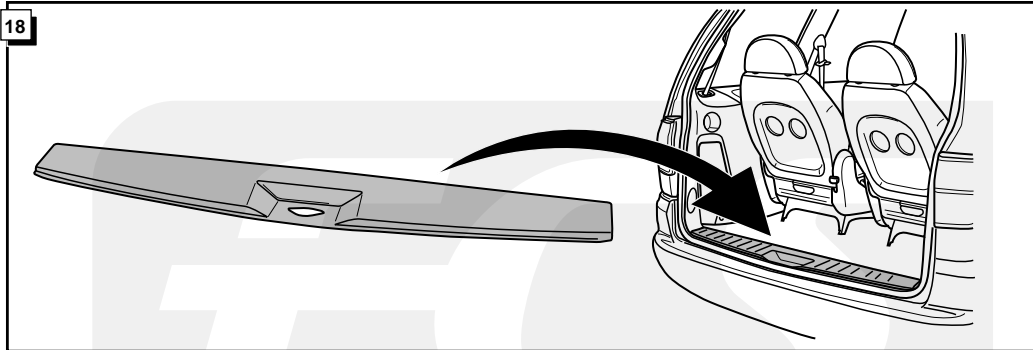

19

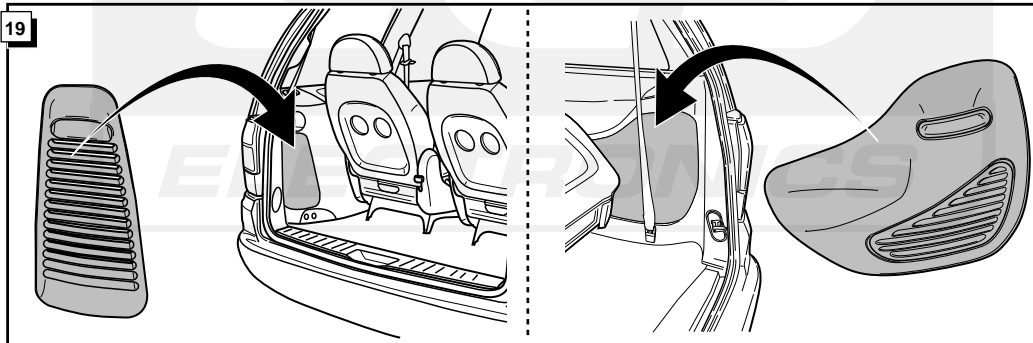



**ROUTING**

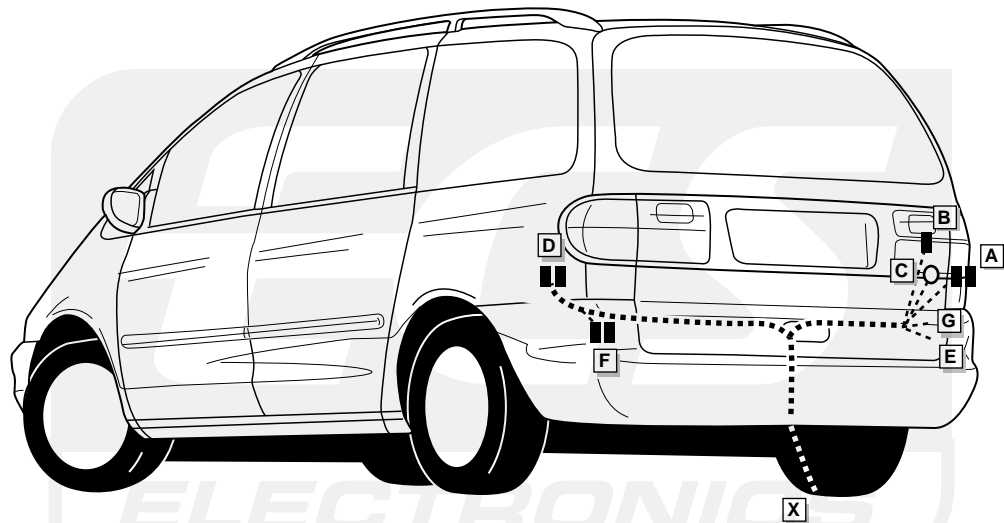

**INFO**



- \*Für das aktivieren der zweiten Kontrolleuchte (C2 Funktion), fragen Sie bitte Ihr Händler.
- \*Pour activer la deuxième lampe de contrôle (C2 fonction), consultez votre stockiste s.v.p.
- \*For activating the second direction indicator light (C2 function), please consult your dealer.
- \*Voor het actief maken van het tweede controlelampje (C2 functie), raadpleeg uw dealer.



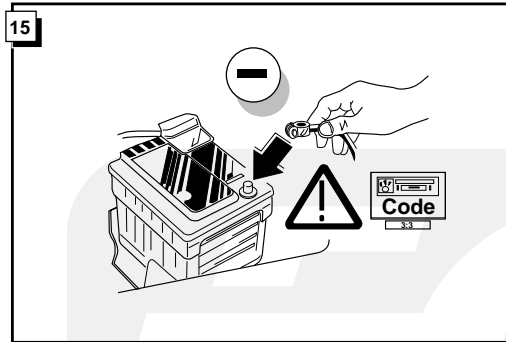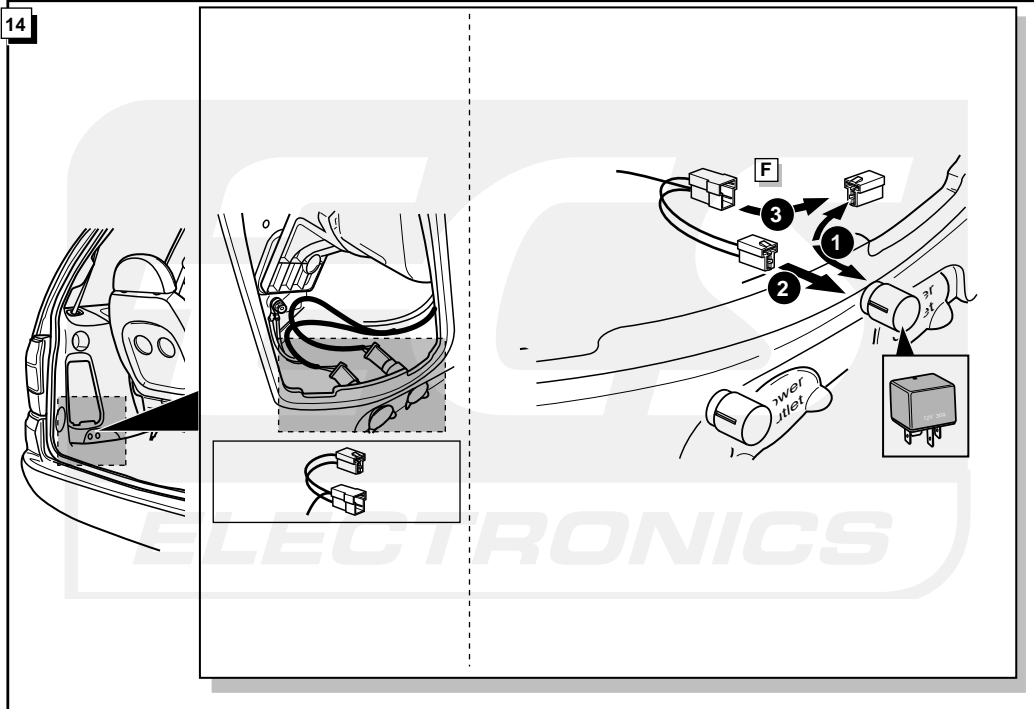

16

**! FUNKTIONEN KONTROLLIEREN !**  
**! CONTRÔLER LES FONCTIONS !**  
**! CHECK FUNCTIONS !**  
**! CONTROLEER FUNCTIES !**

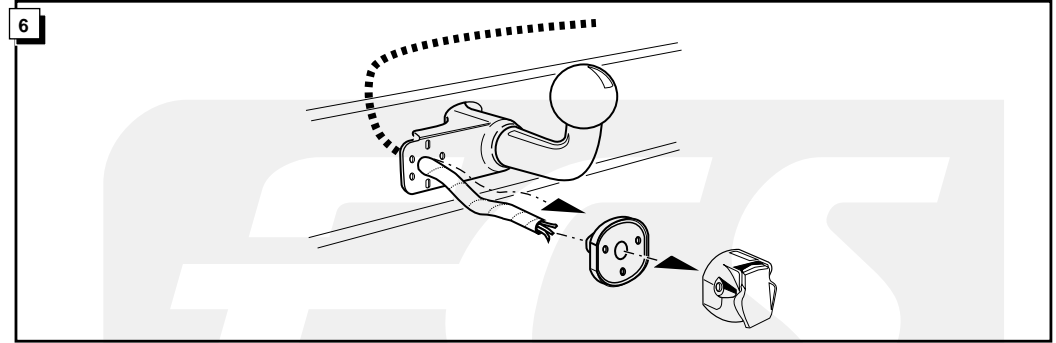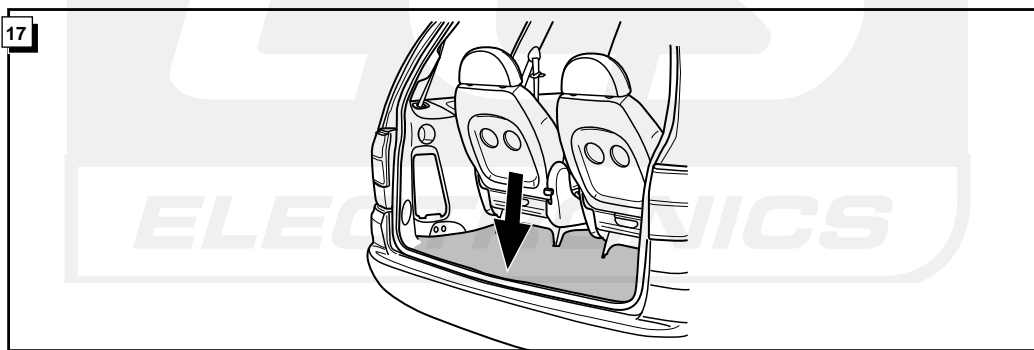

INFO Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting

DIN/ISO 1724		(D)	(F)	(GB)	(NL)
↶	1/L	gelb	jaune	yellow	geel
↷	2	blau	bleu	blue	blauw
⏏	1-8	weiß	blanc	white	wit
↶	4/R	grün	vert	green	groen
☀	5/58-R	braun	marron	brown	bruin
STOP	6/54	rot	rouge	red	rood
☀	7/58-L	schwarz	noir	black	zwart
↶↷	8/58-b	grau	gris	grey	grijs

